



RITAR TERMINAL TYPE


Terminal F1 (187)

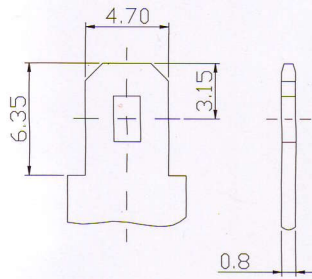


Terminal F2 (250)

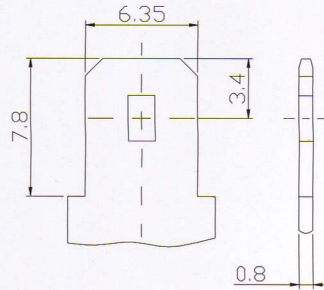


Terminal T5

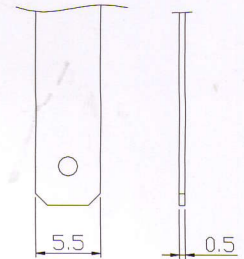


Terminal F5

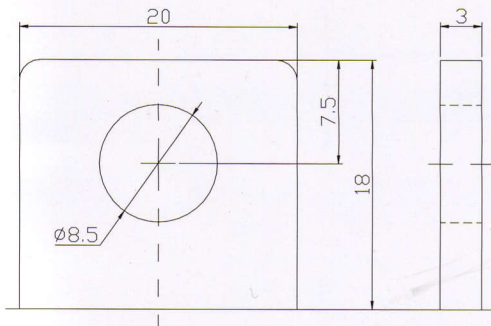


Terminal F13

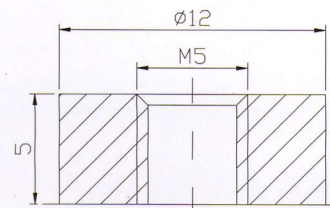


Terminal F4

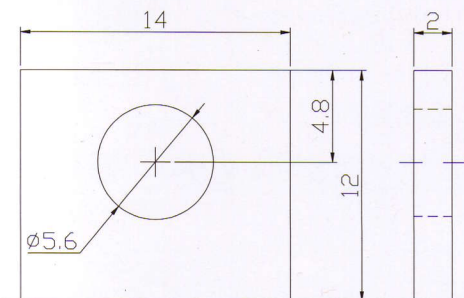


Terminal F11

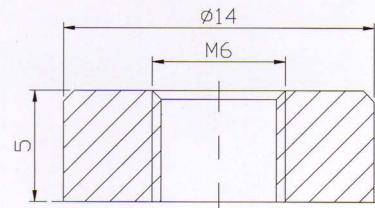

Terminal F3

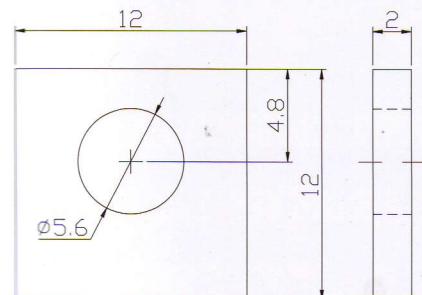

Terminal F12

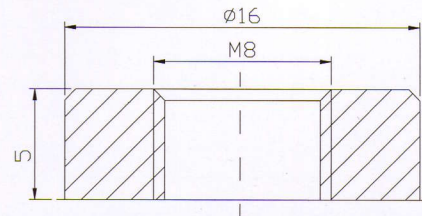

Terminal F10

